


# TOMOS

SPARE  
PARTS  
CATALOGUE

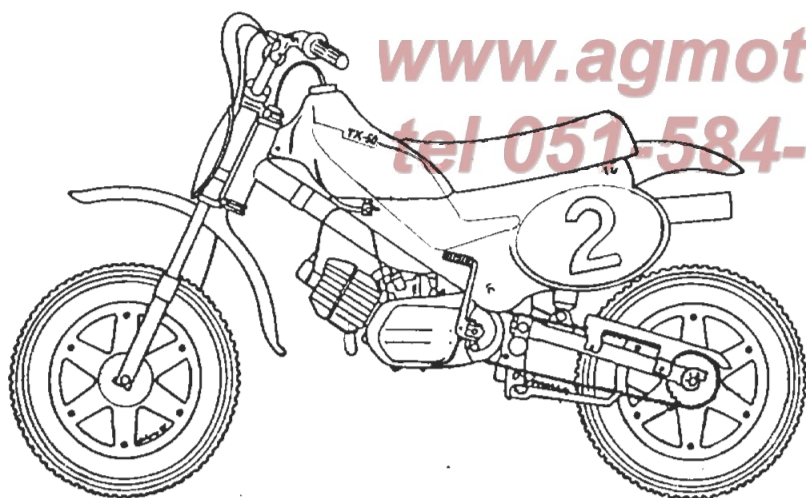


[www.agmoto.hr](http://www.agmoto.hr)  
tel 051-584-123

**TX 50**

# CRANKCASE, CYLINDER, PISTON


A

230 156 - engine  
227 331 - gasket set

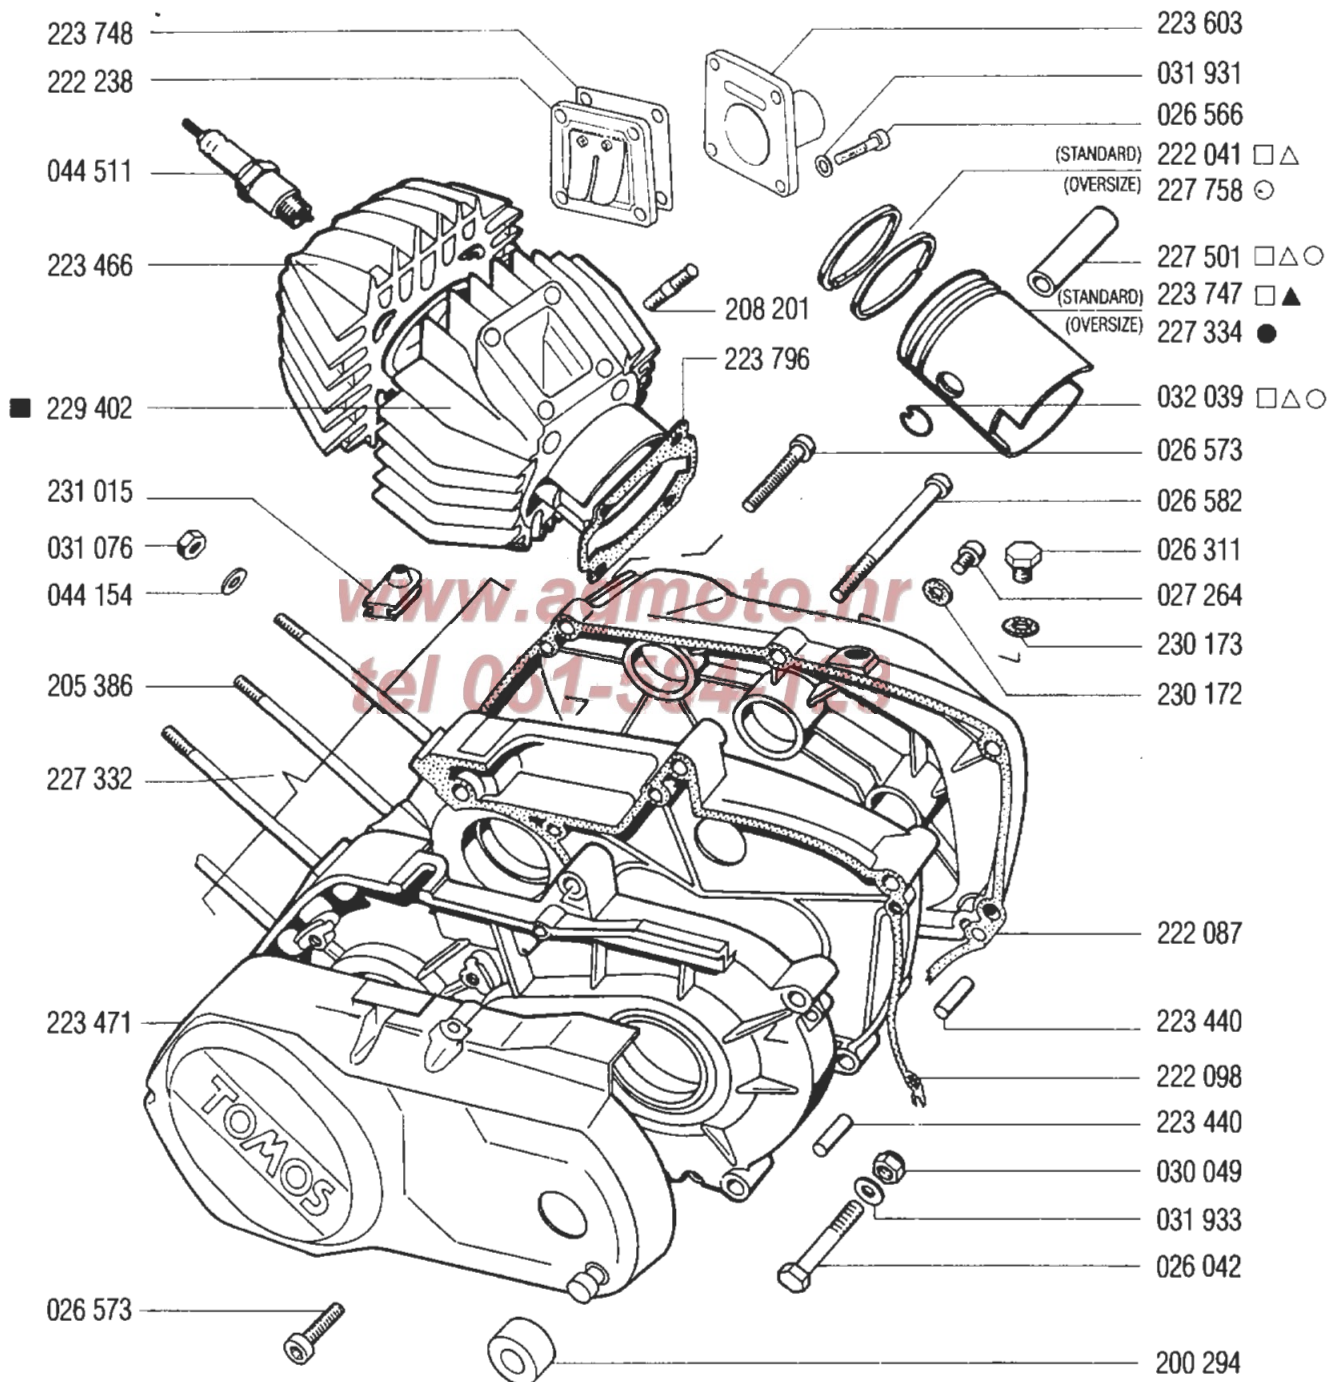


# CRANKSHAFT, CLUTCH

B

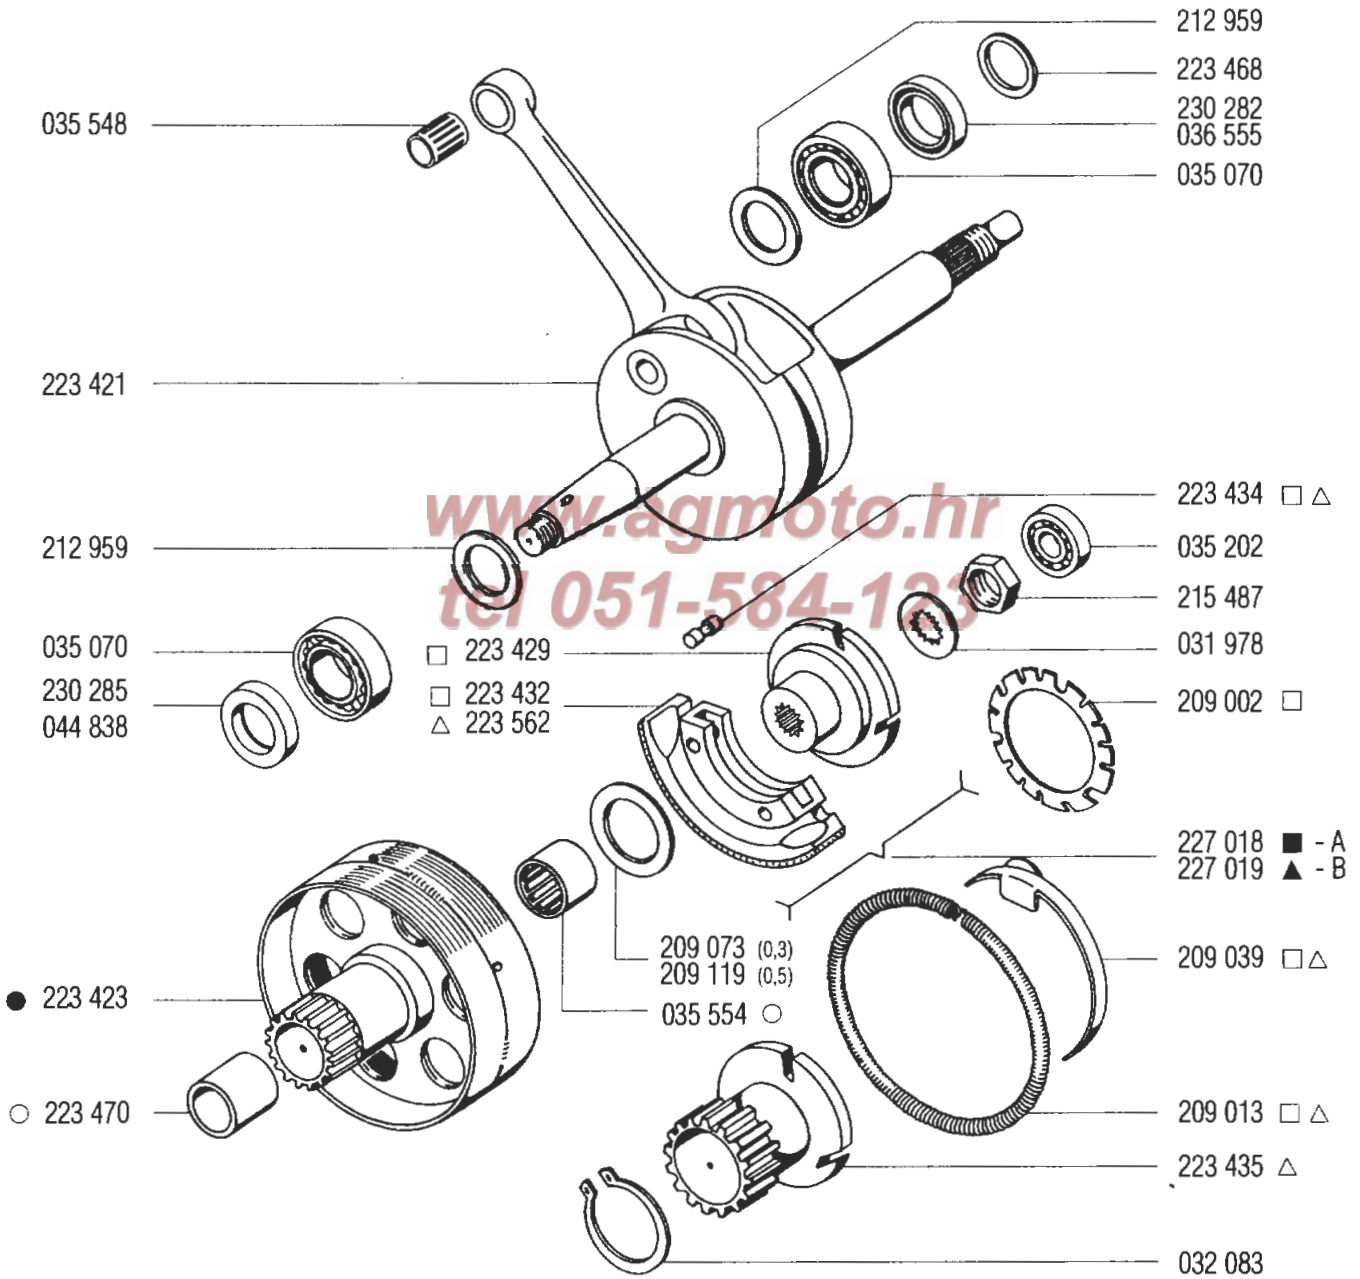


A - 1<sup>st</sup> speed clutch  
 B - 2<sup>nd</sup> speed clutch

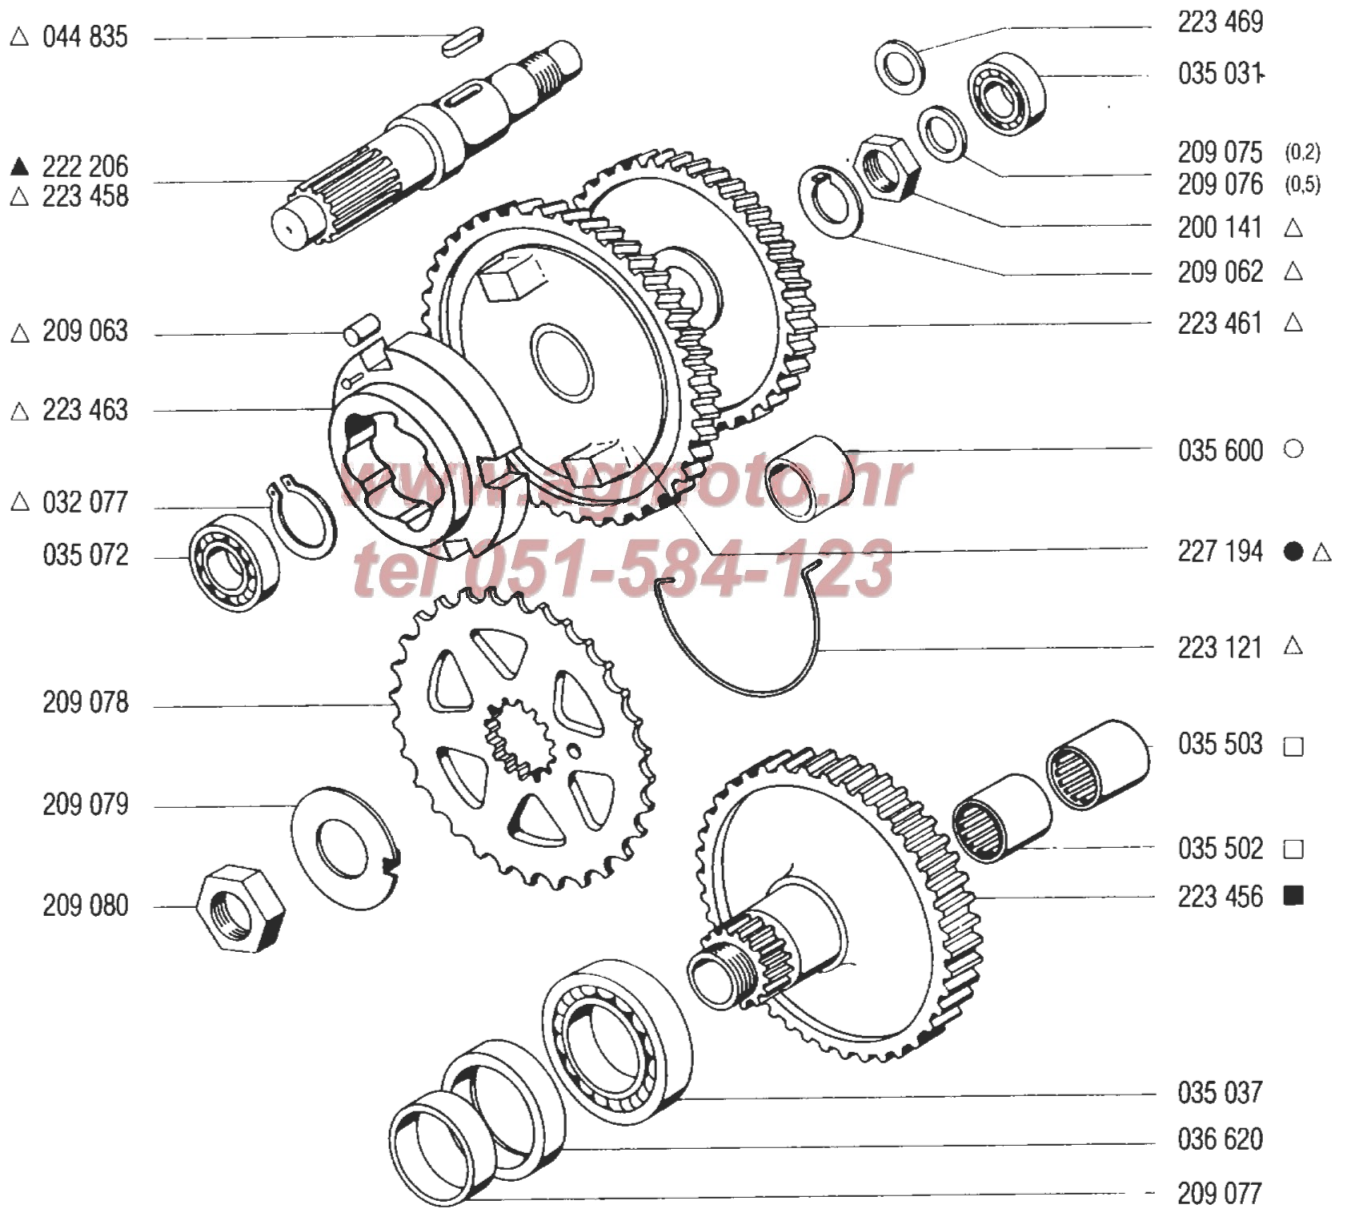

△ 222 209 (section D)


# STARTER ASSEMBLY

D

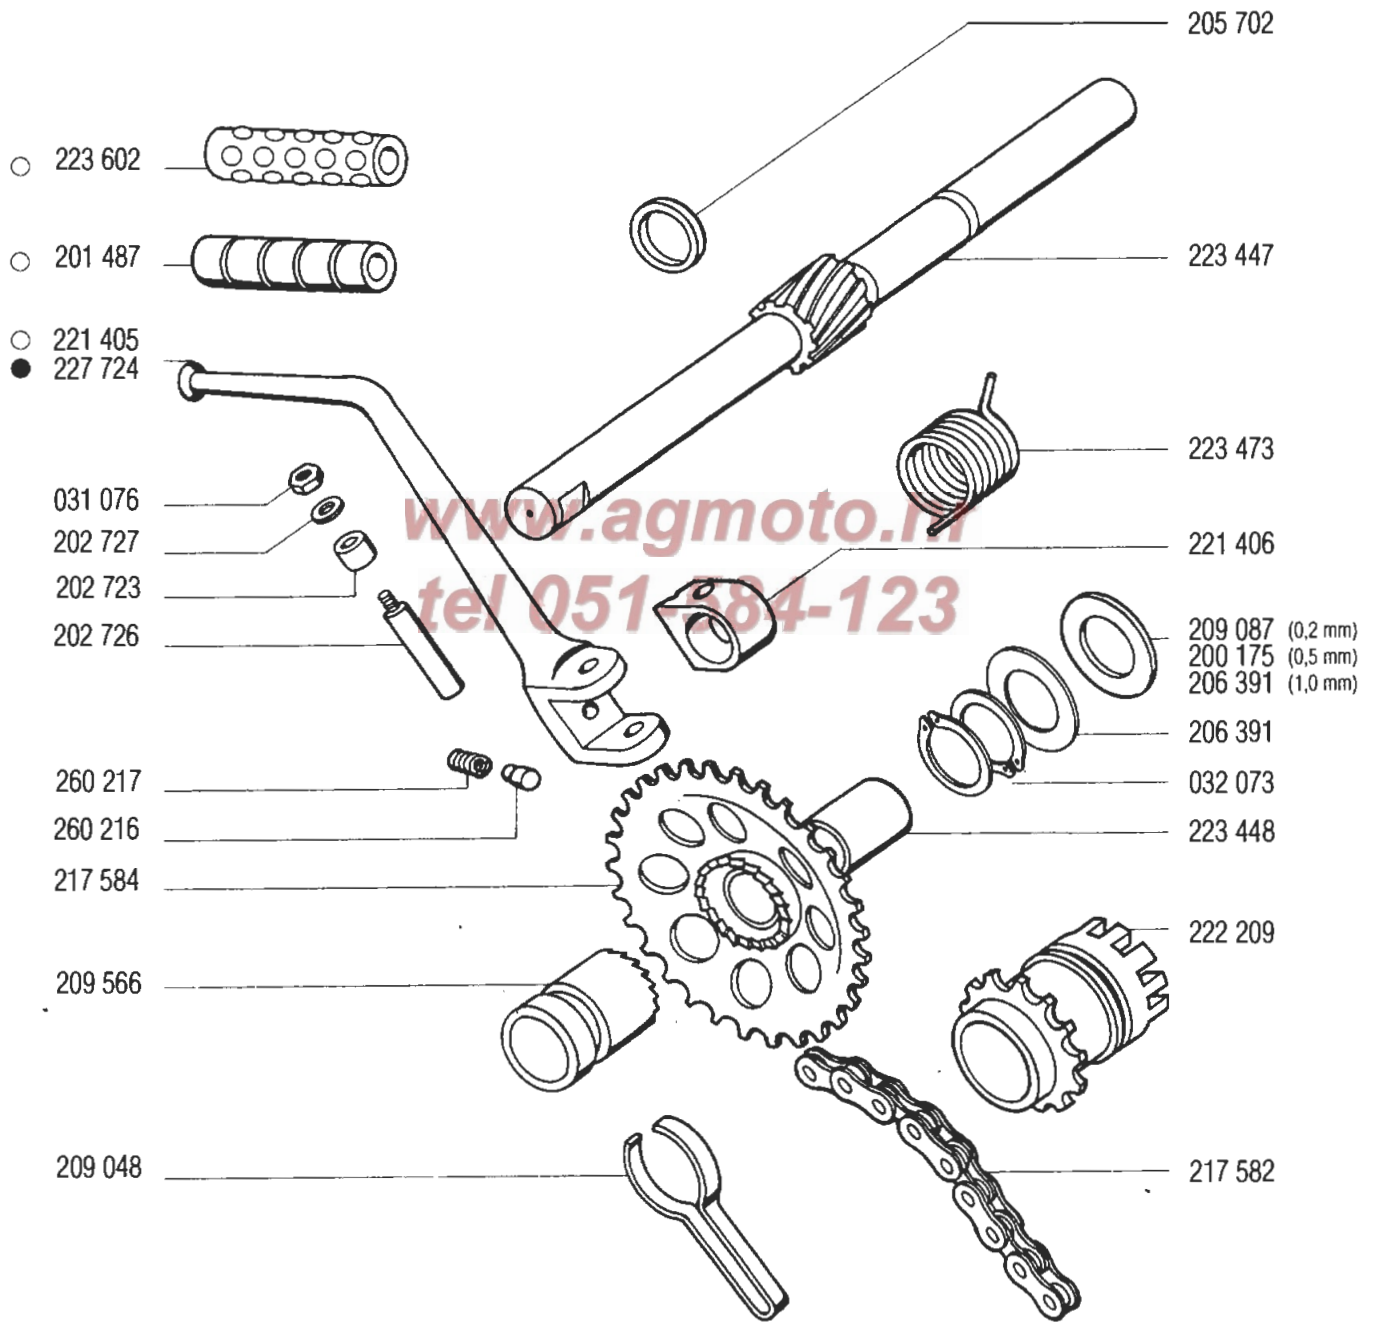


# MAGNETO ASSEMBLY

E

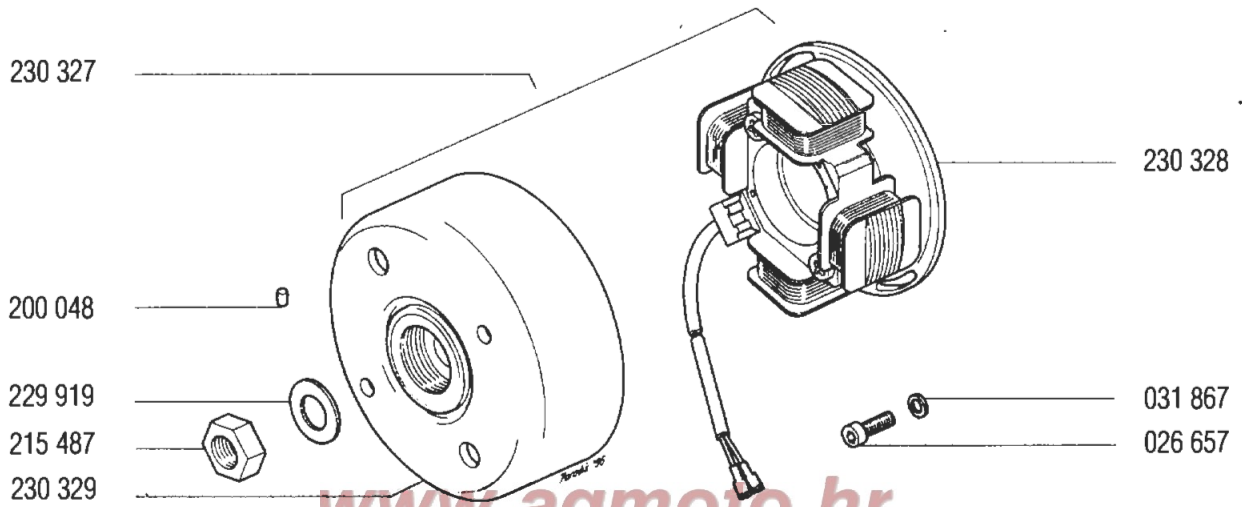

[www.agmoto.hr](http://www.agmoto.hr)  
tel 051-584-123

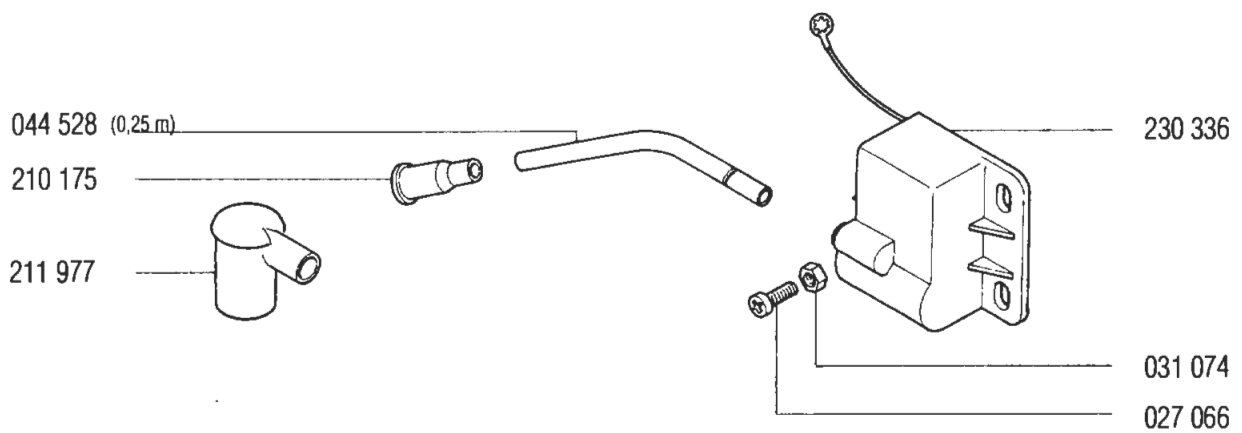




# MAGNETO ASSEMBLY

Ea


● 229 444

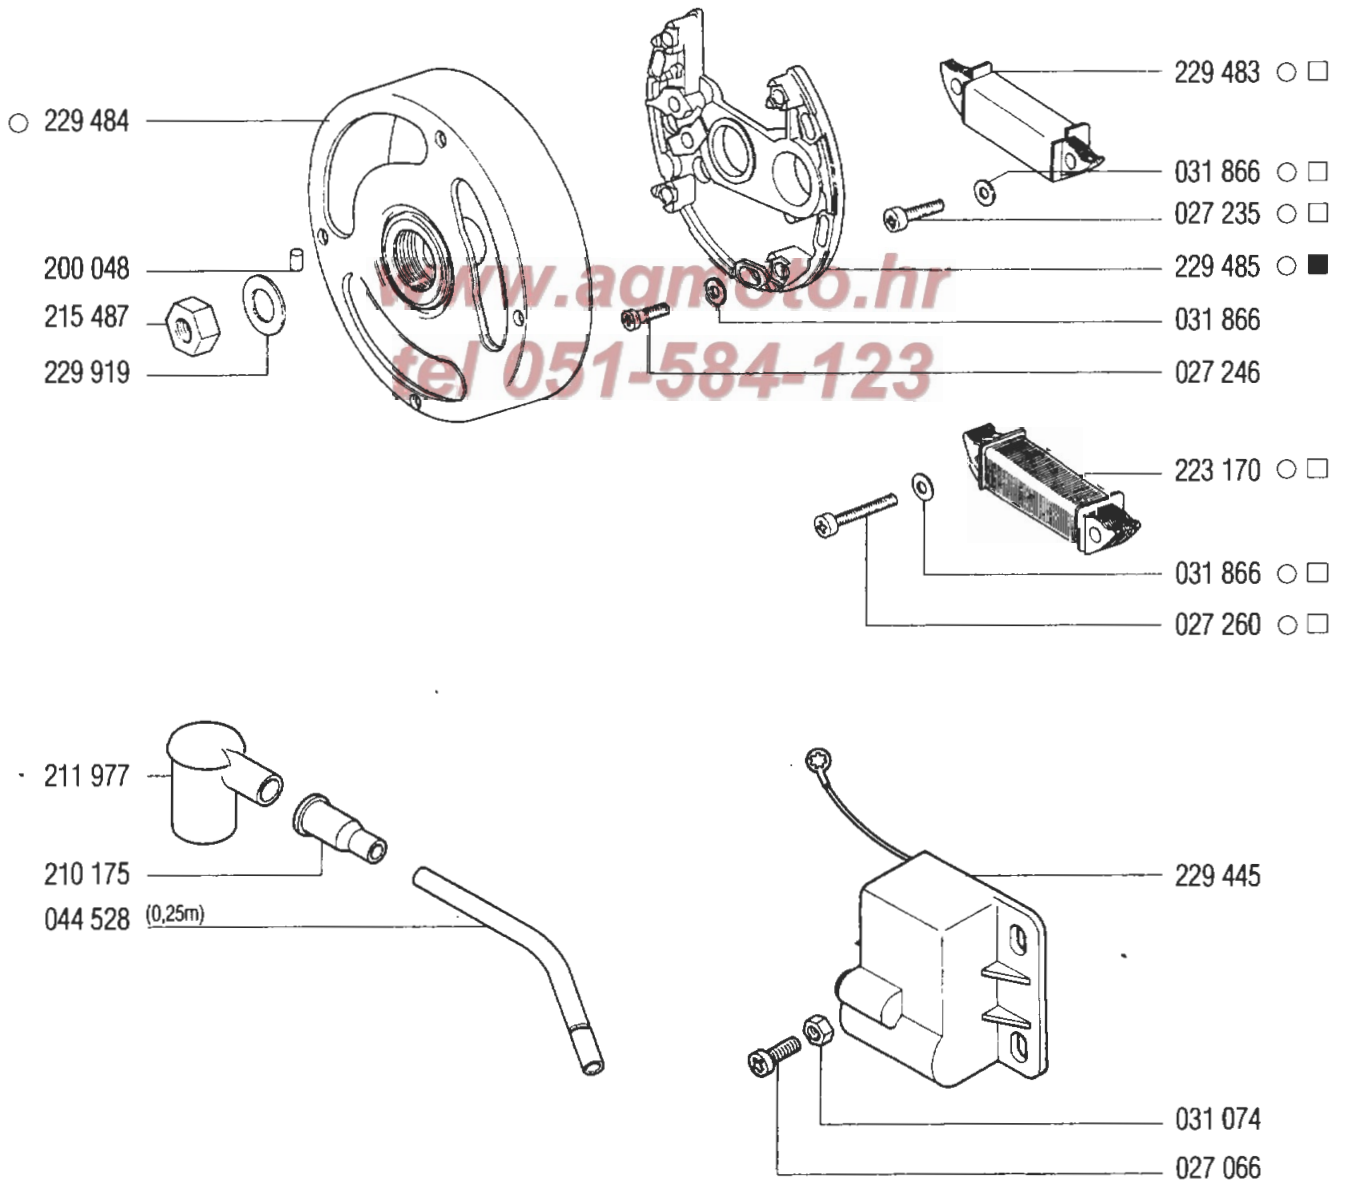

# CARBURETOR, INTAKE MANIFOLD

F


● 230 260

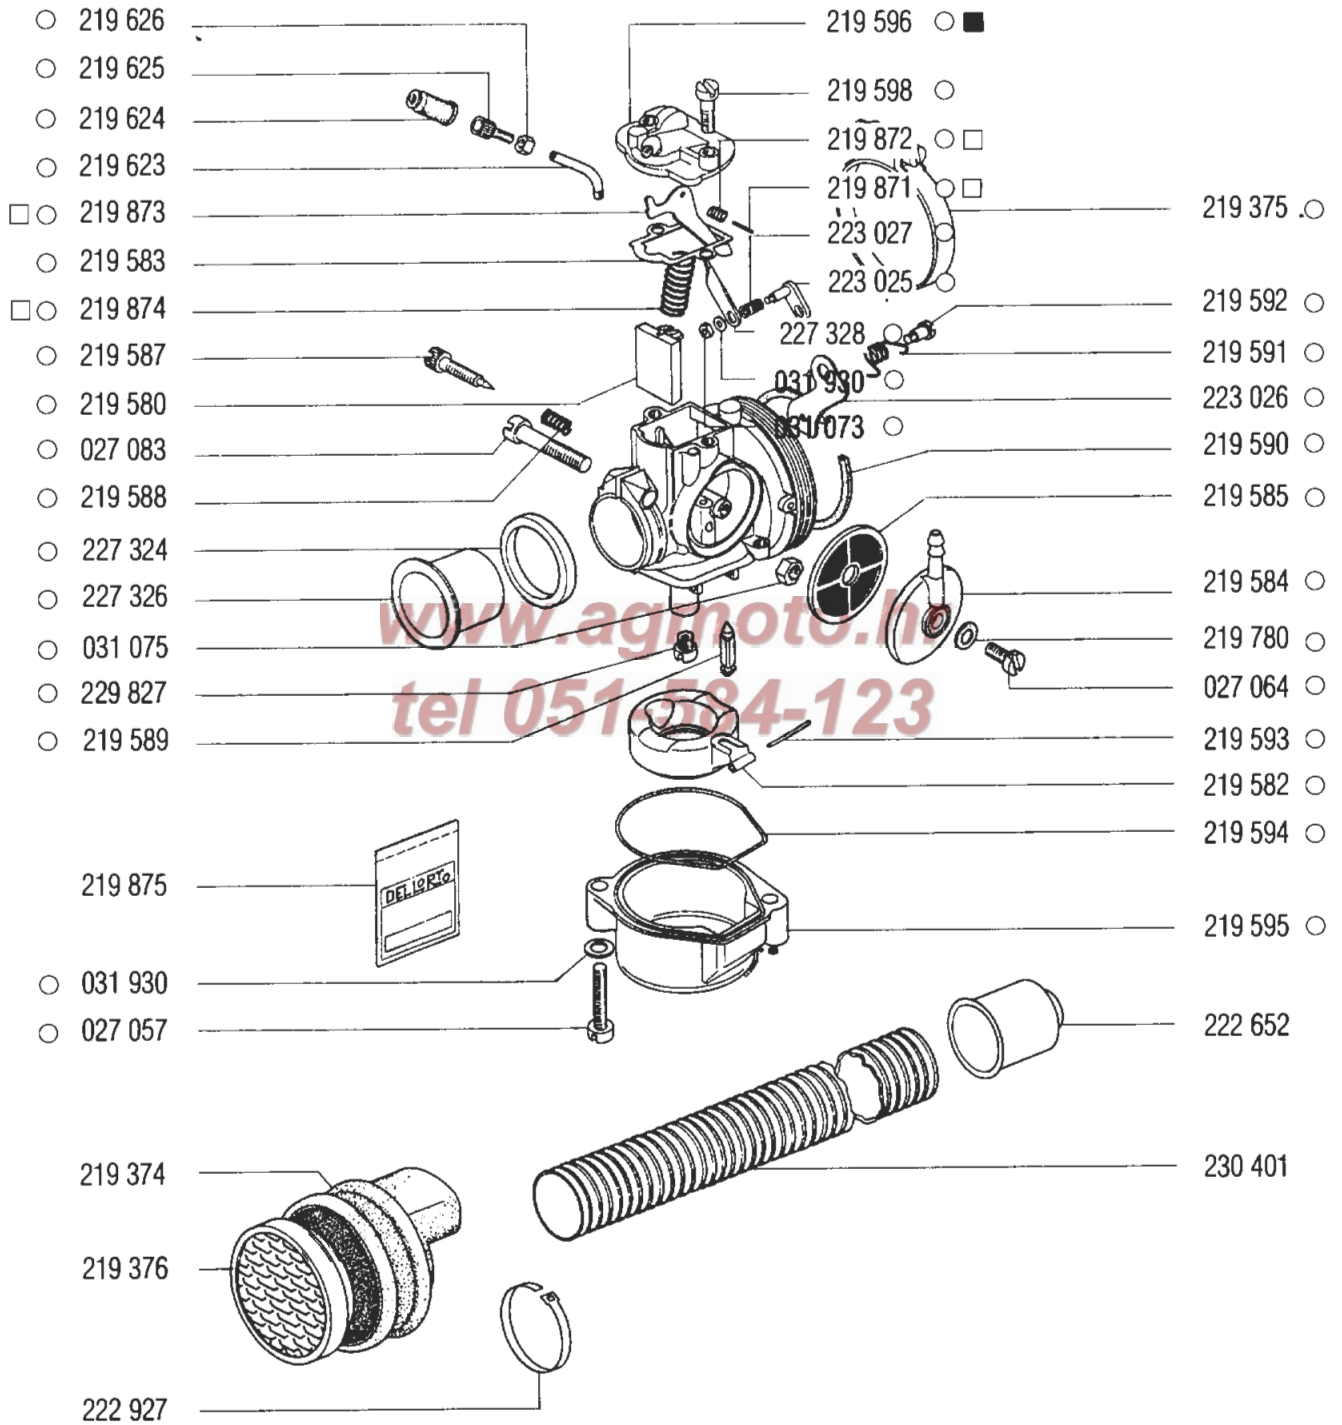





# FUEL TANK, SEAT, EXHAUST SYSTEM

G

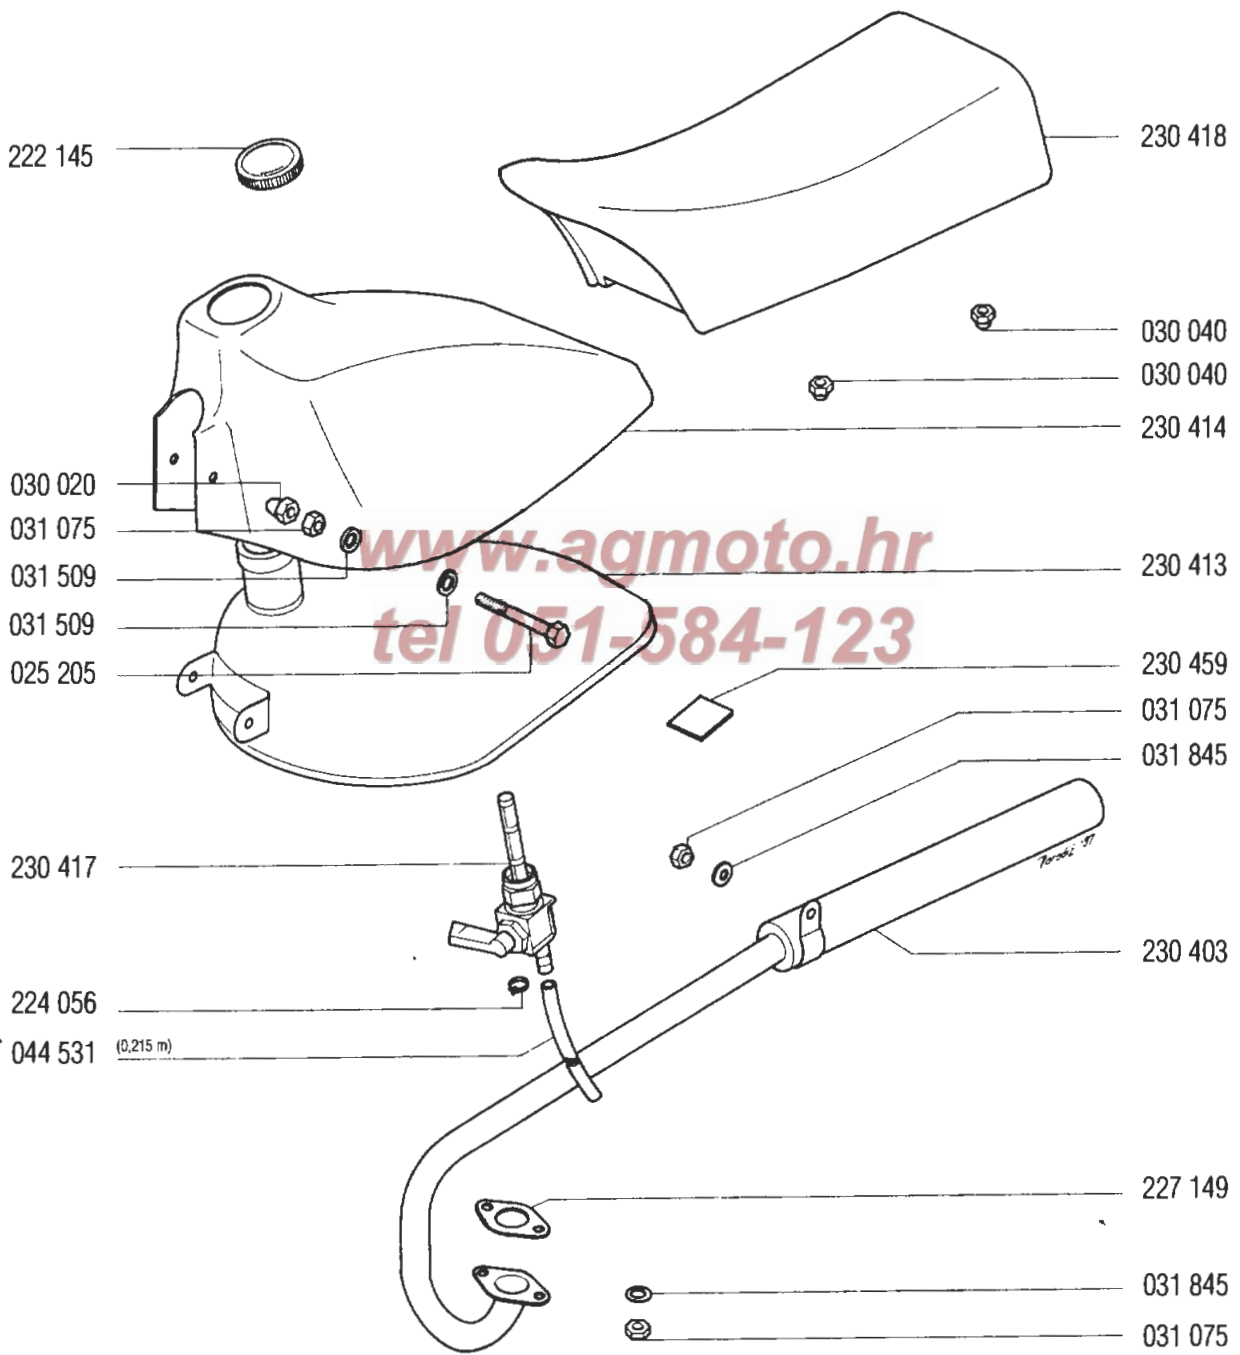

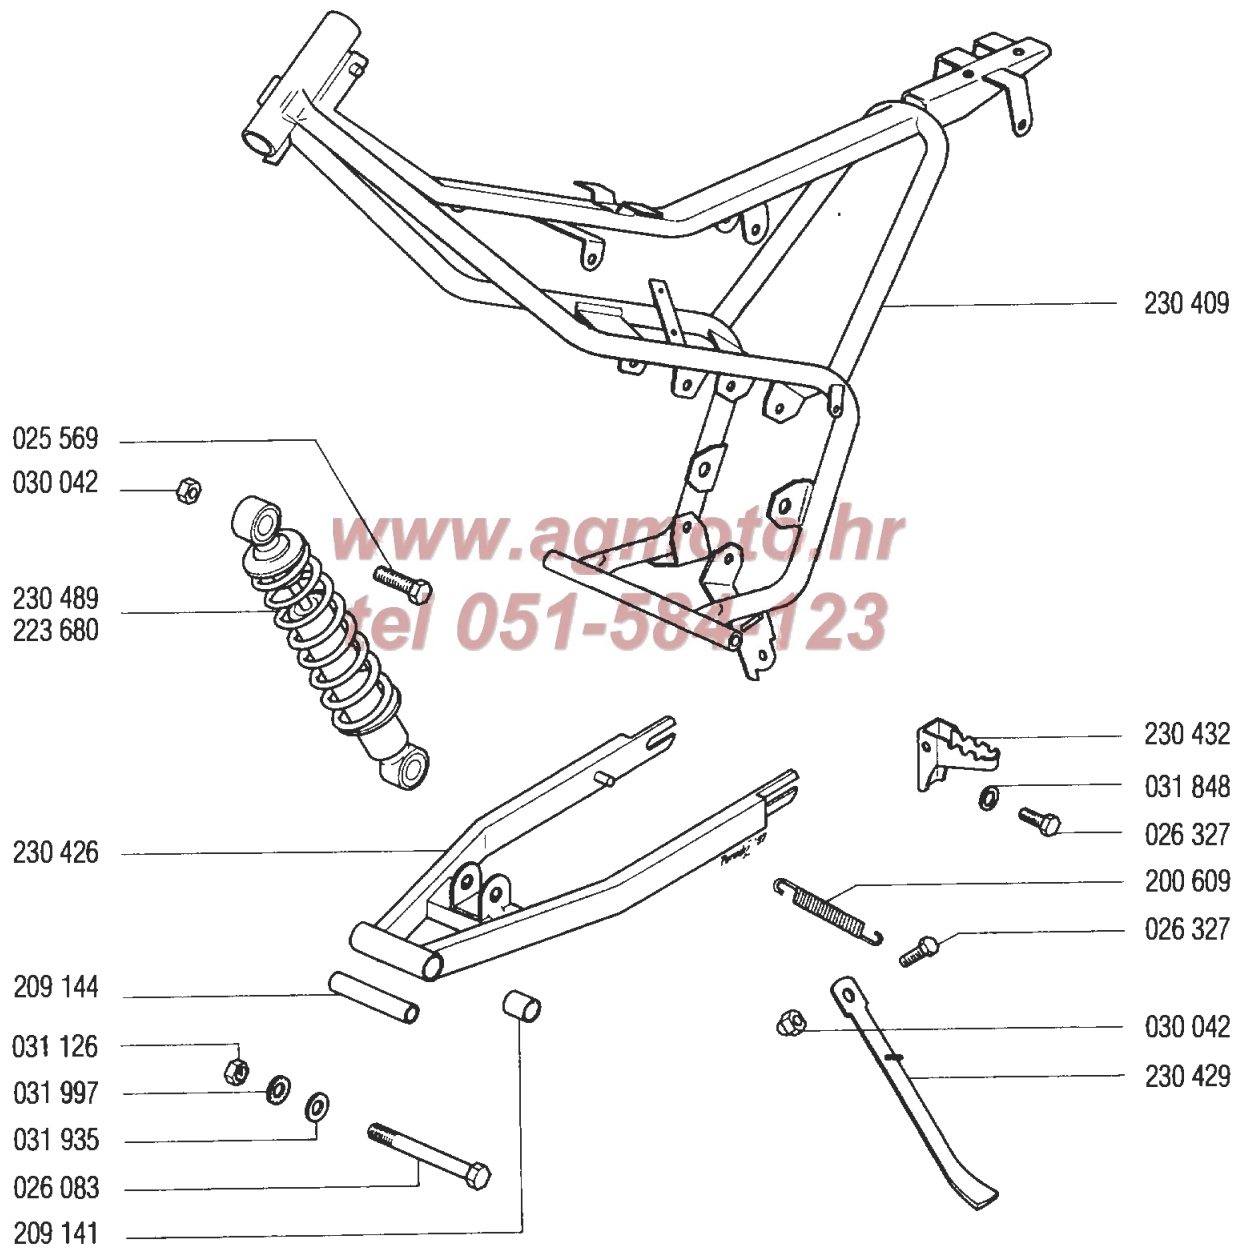


# COVERS, FENDERS

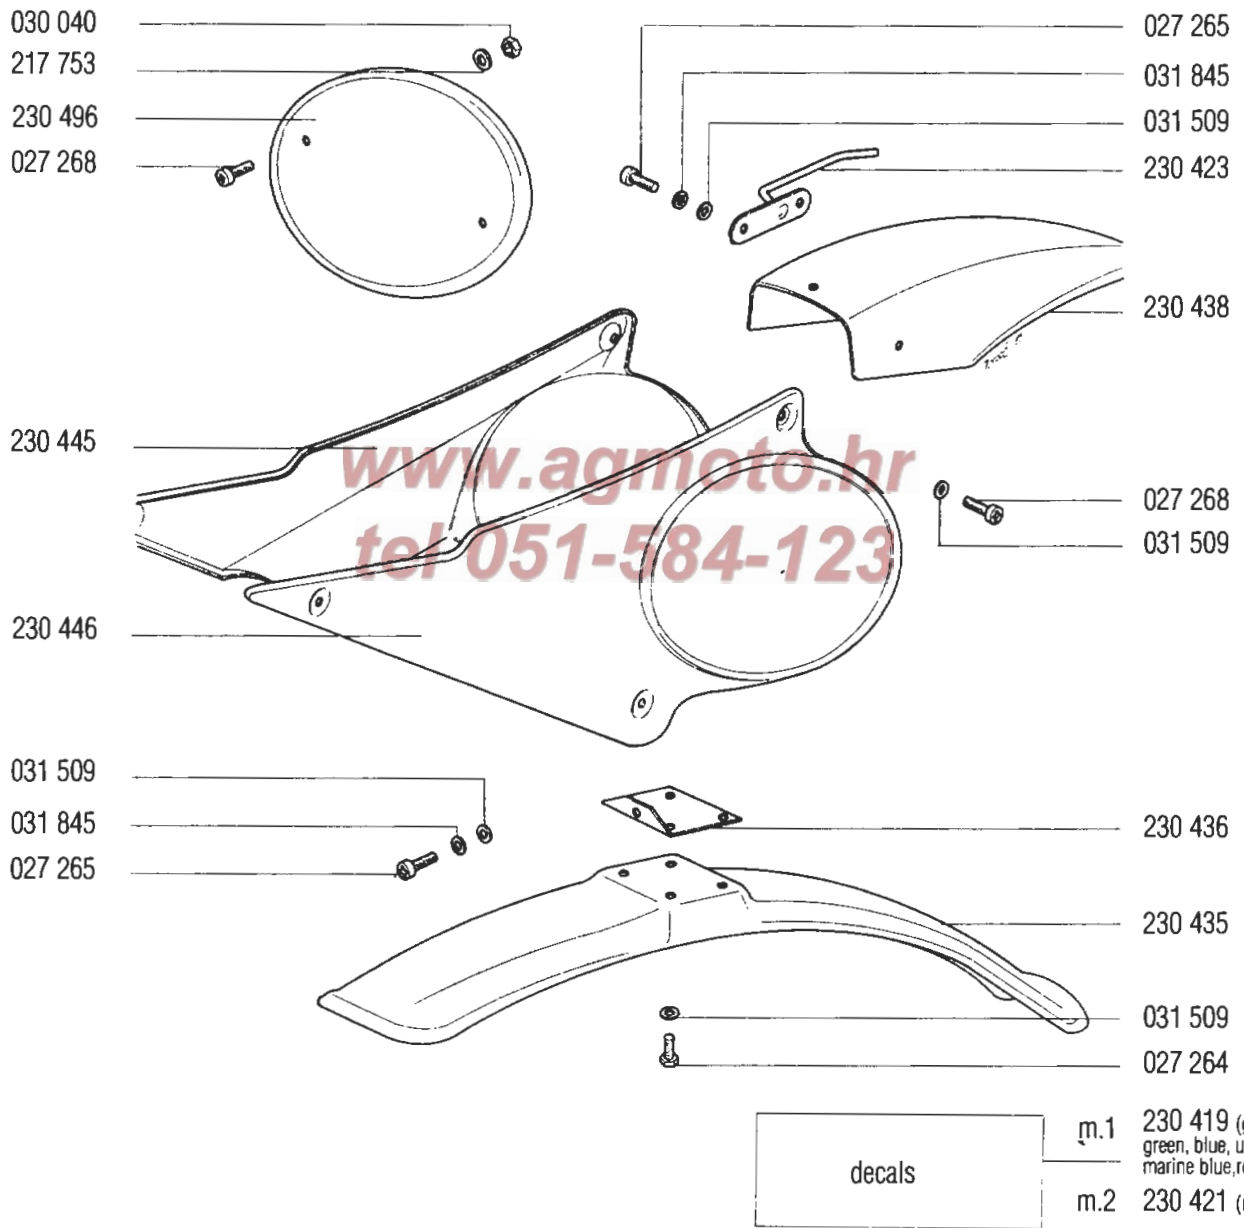

# FRONT FORKS

J


▲ 227 470 - set of bearings

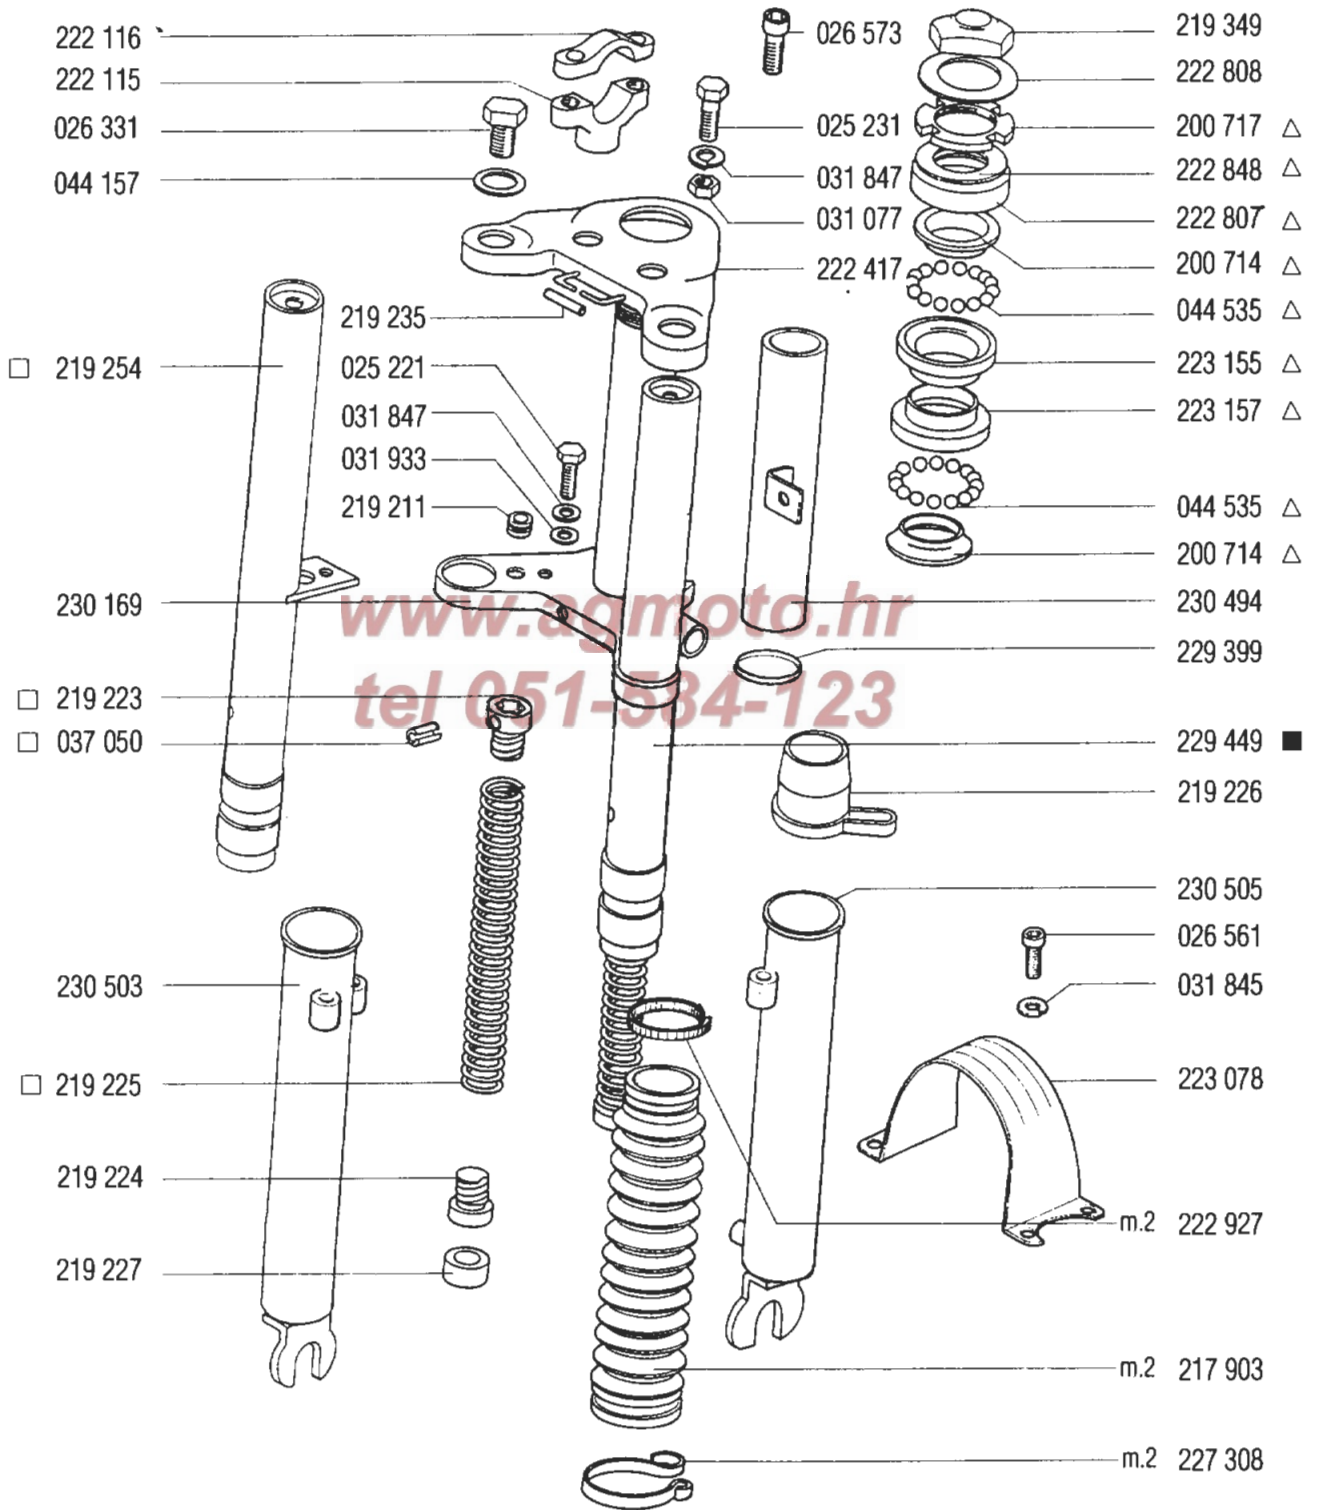

# HANDLEBAR, CONTROLS, CABLES

K


- 229 551 - throttle assy.
- 229 552 - rear brake lever assy.

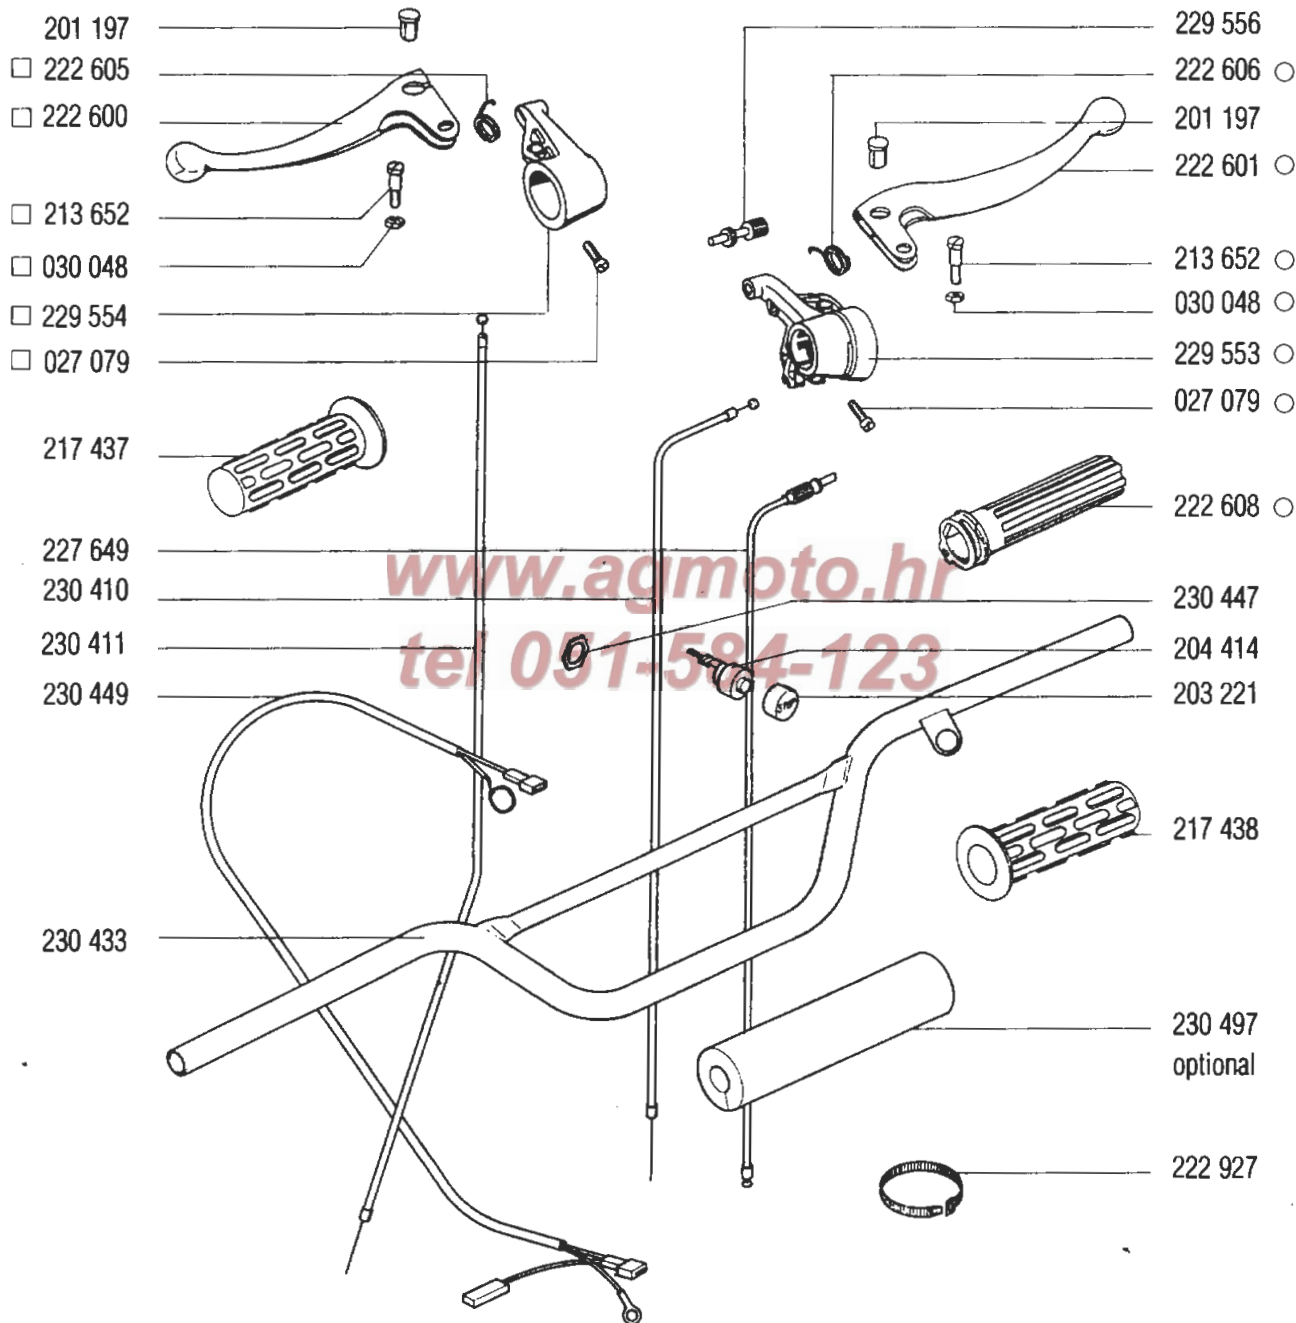

# FRONT MAGWHEEL - m. 1

L

● 230 405

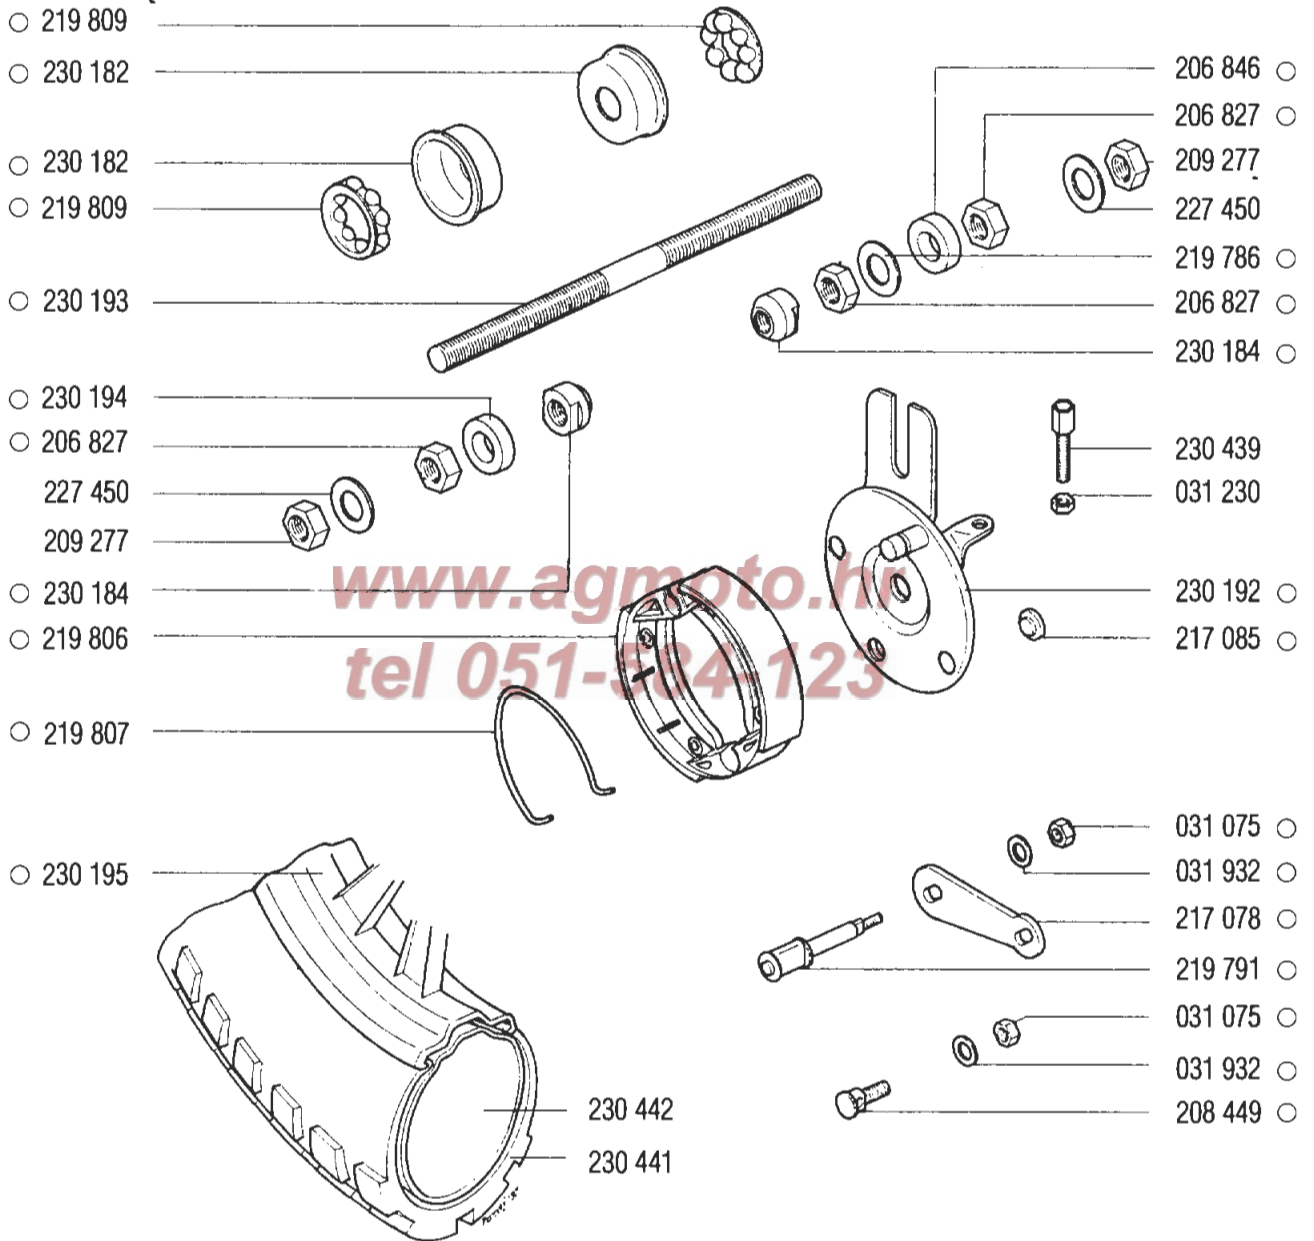




# FRONT MAGWHEEL - m. 2

L


● 230 517

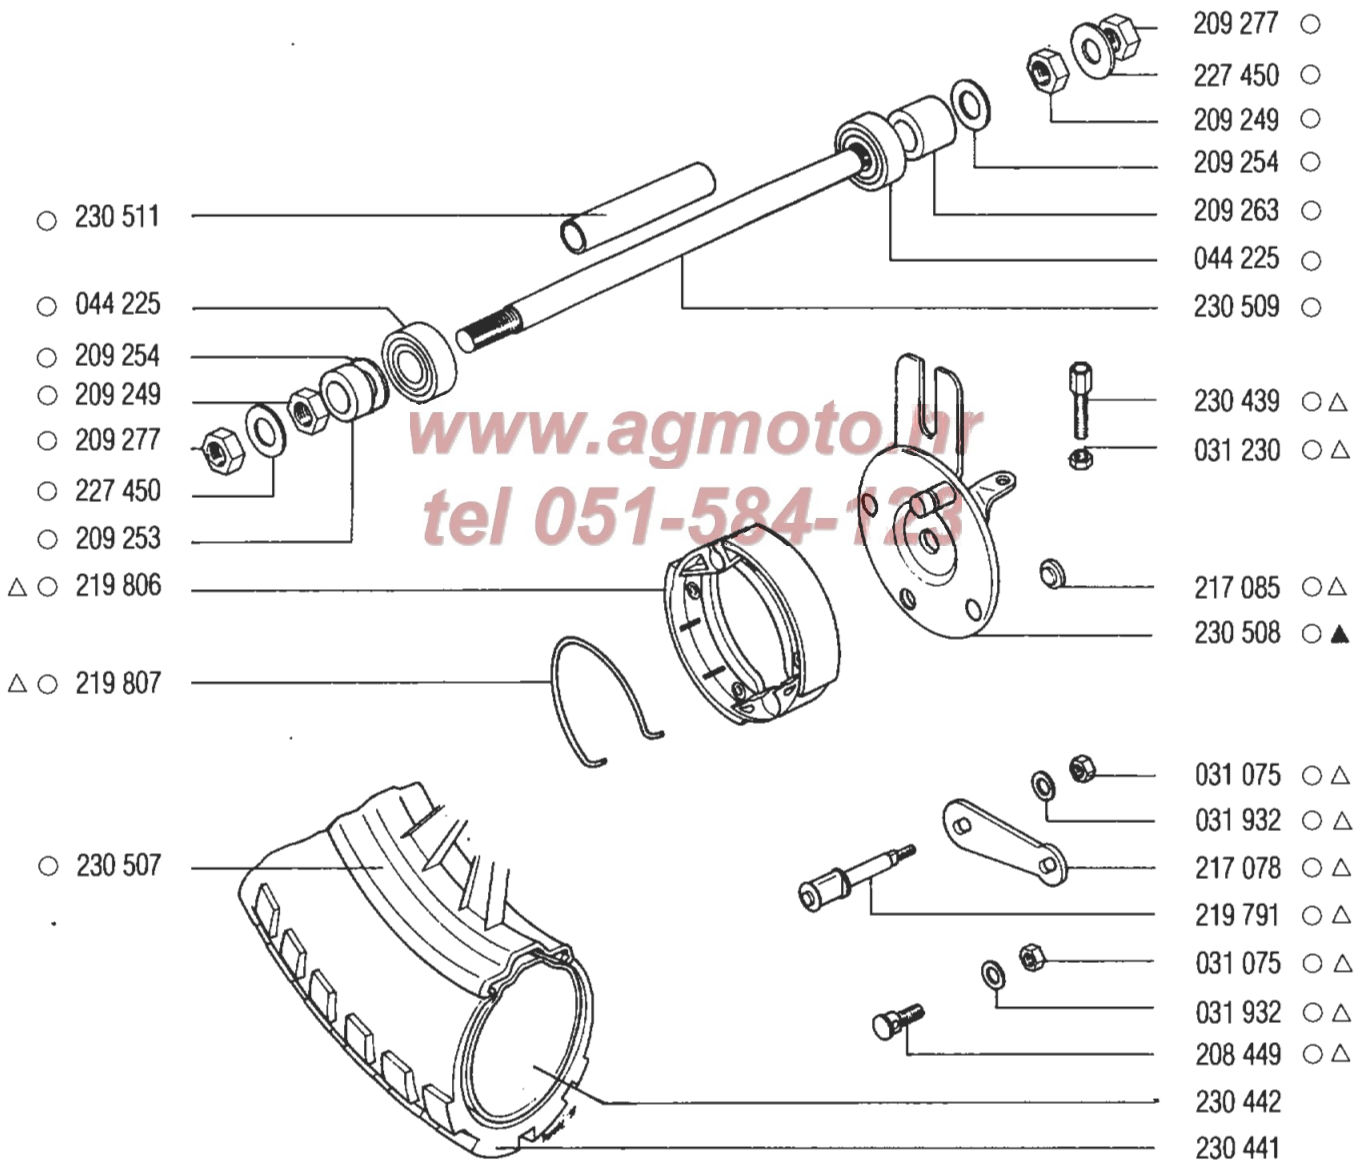

REAR MAGWHEEL - m. 1

M


● 230 406

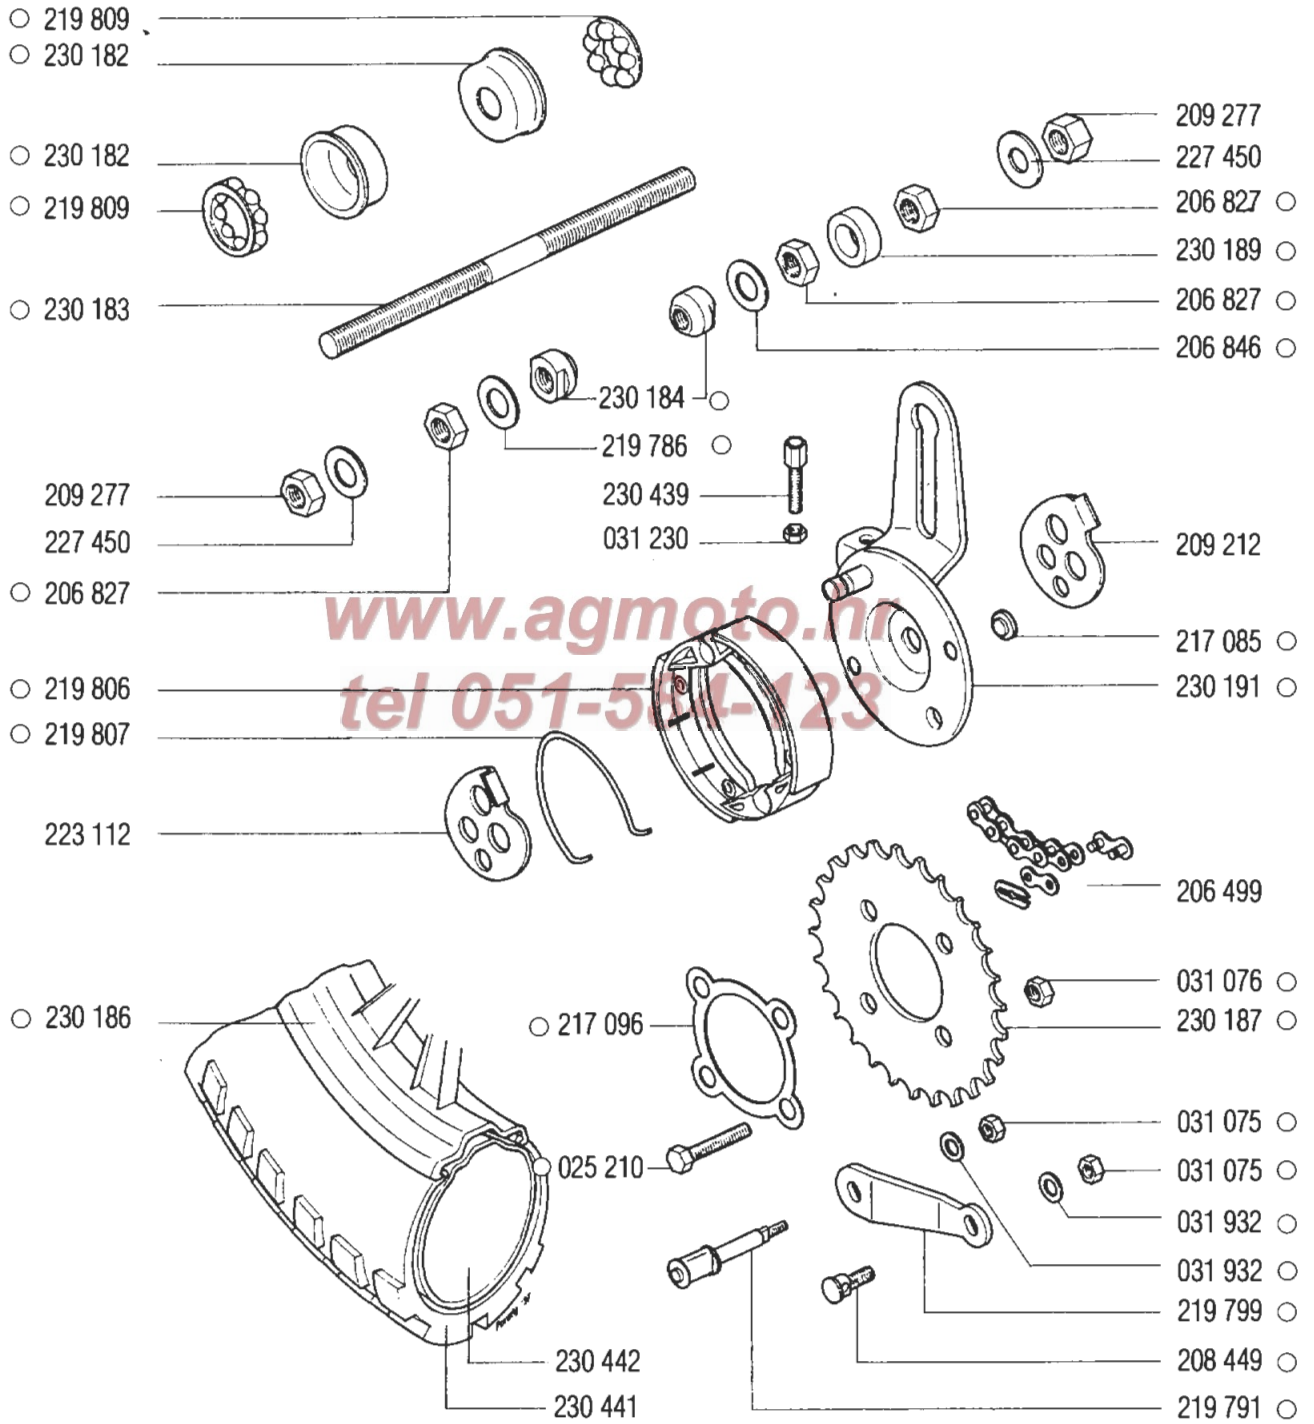

# REAR MAGWHEEL - m. 2

M

● 230 518

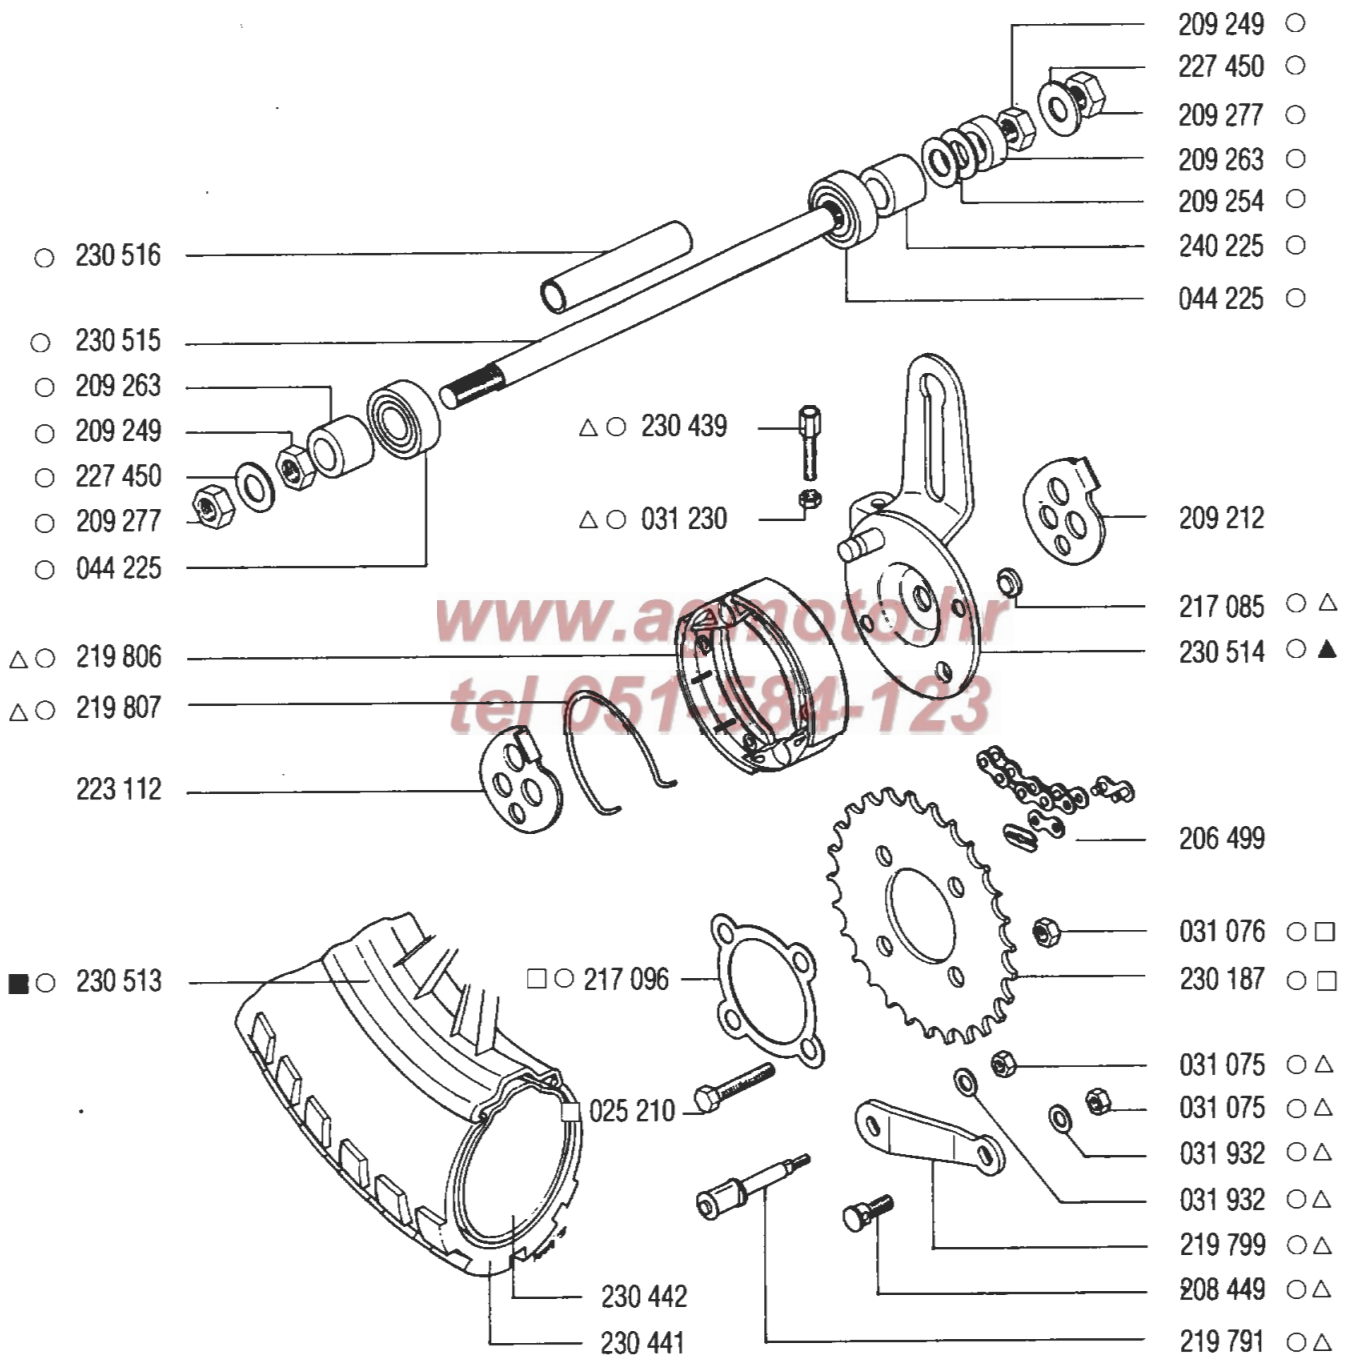

www.apmoto.fr  
tel 051 584-123

# INDEX

Part. No	Description	Section	Part. No	Description	Section
25205	SCREW M6x80	G	200717	NUT	J
25210	SCREW M7x30	M	201197	NIPPLE	K
25221	SCREW M8x18	J	201487	LEVER RUBBER	D
25231	SCREW M8x25	J	202723	BUSH	D
25569	SCREW M10x40	H	202726	PIN	D
26042	SCREW M8x1x75	A	202727	WASHER D7.4xD17x2	D
26083	SCREW M12x1.25x120	H	203221	RUBBER	K
26311	SCREW M8x10	A	204414	STOP SWITCH	K
26327	SCREW M10x25	H	205386	SCREW M7x115	A
26331	SCREW M12x25	J	205702	THRUST WASHER 2.0	D
26561	SCREW M6x16	J	206391	WASHER 1.0 - if required	D
26566	SCREW M5x20	A	206499	CHAIN 91 ROLLERS	M
26573	SCREW M6x25	A, J	206827	NUT M11x1	L, M
26582	SCREW M6x65	A	206846	DISTANCE BUSH	L, M
26657	SCREW M5x12	E	208201	STUD BOLT M6x24	A
27057	SCREW M4x20	F	208449	BRAKE CAM	L, M
27064	SCREW M5x10	F	209002	SPRING WASHER	B
27066	SCREW M5x16	E, Ea	209013	CLUTCH SPRING	B
27079	SCREW M6x16	K	209039	BRAKE STRIP	B
27083	SCREW M6x30	F	209048	RETURN SPRING	D
27235	SCREW M4x12	Ea	209062	PROTECTIVE WASHER	C
27246	SCREW M4x12	Ea	209063	ROLLER D5x8	C
27260	SCREW M5x20	Ea	209073	WASHER 0.3 - if required	B
27264	SCREW M6x10	A, I	209075	WASHER 0.2 - if required	C
27265	SCREW M6x12	I	209076	WASHER 0.5 - if required	C
27268	SCREW M6x16	I	209077	DISTANCE BUSH	C
30020	NUT M6	G	209078	CHAIN SPROCKET Z26	C
30040	NUT M6	G, I	209079	PROTECTIVE PLATE	C
30042	NUT M10x5	H	209080	NUT M22x1	C
30048	NUT M5	K	209087	WASHER 0.2 - if required	D
30049	NUT M8x1	A	209119	WASHER 0.5 - if required	B
31073	NUT M4	F	209141	BEARING BUSH	H
31074	NUT M5	E, Ea	209144	DISTANCE TUBE	H
31075	NUT M6	F, G, L, M	209212	CHAIN TENSION ADJUSTER RH	M
31076	NUT M7	A, D, M	209249	NUT M11x1	L, M
31077	NUT M8	J	209254	WASHER D12xD18x1.5	L, M
31126	NUT M12x1.25	H	209253	DISTANCE BUSH	L
31230	NUT M6x5	L, M	209263	DISTANCE BUSH	L, M
31509	WASHER A6	G, I	209277	NUT M11x1	L, M
31845	WASHER B6	G, I, J	209566	RATCHET BLOCK	D
31847	WASHER B8	J	210175	RUBBER PROTECTOR	E, Ea
31848	WASHER B10	H	211977	SPARK PLUG CAP	E, Ea
31866	WASHER A4	Ea	212959	SHIM 0.2	B
31867	WASHER A5	E	213652	SCREW	K
31930	WASHER 4	F	215487	NUT M10x1	B, E, Ea
31931	WASHER 5	A	217078	BRAKE LEVER	L
31932	WASHER 6	L, M	217085	CAP	L, M
31933	WASHER 8	A, J	217096	PROTECTIVE WASHER	M
31935	WASHER 12	H	217437	GRIP LH	K
31978	WASHER B10	B	217438	GRIP RH	K
31997	WASHER A12	H	217582	CHAIN	D
32039	WIRE CIRCLIP	A	217584	CHAIN SPROCKET Z25	D
32073	CIRCLIP	D	217753	WASHER D6.5xD18x2	I
32077	CIRCLIP	C	217903	DUST PROTECTOR	J
32083	CIRCLIP	B	219211	RUBBER GUIDE	J
35031	BALL BEARING	C	219223	UPPER PLUG	J
35037	BALL BEARING	C	219224	LOWER PLUG	J
35070	BALL BEARING	B	219225	SPRING	J
35072	BALL BEARING	C	219226	RUBBER BUSH	J
35202	BALL BEARING	B	219227	RUBBER ABSORBER	J
35502	NEEDLE BEARING	C	219235	TUBE	J
35503	NEEDLE BEARING	C	219254	SUPPORTING TUBE	J
35548	NEEDLE BEARING	B	219349	STEERING NUT	J
35554	ROLLER CLUTCH	B	219374	JUNCTION SLEEVE	F
35600	BEARING	C	219375	CLAMP	F
36555	GASKET	B	219376	AIR FILTER	F
36620	GASKET	C	219580	THROTTLE SLIDE	F
37050	PIN	J	219582	FLOAT	F
44154	WASHER A7	A	219583	GASKET	F
44157	WASHER A12	J	219584	FUEL CONNECTION	F
44225	BALL BEARING	L, M	219585	FUEL FILTER	F
44511	SPARK PLUG	A	219587	ADJUSTING CREW	F
44528	CABLE	E, Ea	219588	SPRING	F
44531	FUEL TUBE	G	219589	FLOAT VALVE	F
44535	BALL	J	219590	GASKET	F
44835	WOODRUFF KEY	C	219591	SPRING	F
44838	GASKET	B	219592	SCREW	F
200048	ROLLER D3x4	E, Ea	219593	FLOAT PIN	F
200141	NUT M14x1	C	219594	GASKET	F
200175	SHIM (0.5 mm)	D	219595	FLOAT CHAMBER	F
200294	RUBBER	A	219596	COVER	F
200609	SPRING	H	219598	SCREW	F
200714	STEERING BEARING CONE	J	219623	CONNECTION	F

www.agmop.com  
tel 051-58412



# INDEX

Part. No	Description	Section	Part. No	Description	Section
219624	RUBBER BUSH	F	227334	PISTON 1st OVERSIZE	A
219625	ADJUSTING SCREW	F	227450	WASHER D11.1xD20x2	L, M
219626	NUT	F	227470	SET OF HANDLEBAR BEARINGS	J
219780	SEAL RING	F	227501	GUDGEON PIN	A
219786	DISTANCE WASHER	L, M	227649	THROTTLE CABLE	K
219791	BRAKE CAM	L, M	227724	KICK START LEVER	D
219799	BRAKE LEVER	M	227758	PISTON RING	A
219806	BRAKE SHOE	L, M	229399	RUBBER RING	J
219807	SPRING	L, M	229402	CYLINDER WITH PISTON	A
219809	BEARING (CAGE)	L, M	229444	MAGNETO CPL.	Ea
219871	PIN	F	229445	ELECTRONIC IGNITION COIL	Ea
219872	SPRING	F	229449	SUPPORTING TUBE	J
219873	LEVER	F	229483	COIL	Ea
219874	SPRING	F	229484	FLYWHEEL	Ea
219875	SET OF GASKET	F	229485	DISTANCE BUSH	Ea
221405	KICK START LEVER	D	229551	THROTTLE ASSY.	K
221406	HUB	D	229552	BRAKE LEVER	K
222041	PISTON RING	A	229553	LEVER CLAMP RH	K
222087	SIDE COVER GASKET	A	229554	LEVER CLAMP LH	K
222098	CENTERCASE GASKET	A	229556	ADJUSTING SCREW	K
222115	LOWER HANDLEBAR CLAMP	J	229827	MAIN JET	F
222116	UPPER HANDLEBAR CLAMP	J	229919	WASHER	E, Ea
222145	FUEL TAP	G	230156	ENGINE	A
222206	COUNTERSHAFT	C	230169	LOWER YOKE	J
222209	STARTING CAGE	C, D	230172	SEALING WASHER A6x12	A
222238	REED VALVE	A	230173	SCREW A8x14	A
222417	TOP FORK LUG	J	230182	RING	L, M
222600	BRAKE LEVER LH	K	230183	REAR AXLE	M
222601	BRAKE LEVER RH	K	230184	STEERING BEARING CONE	L, M
222605	SPRING LH	K	230186	REAR WHEEL	M
222606	SPRING RH	K	230187	CHAIN SPROCKET Z27	M
222608	THROTTLE TWIST GRIP	K	230189	DISTANCE BUSH	M
222652	REDUCING TUBE 30/13.5	F	230191	BRAKE PLATE REAR	M
222807	PROTECTIVE COVER	J	230192	BRAKE PLATE FRONT	L
222808	WASHER D26.2xD36x0.7	J	230193	FRONT AXLE	L
222848	WASHER D26.2xD36x2	J	230194	DISTANCE BUSH	L
222927	STRIP 180	F, J, K	230195	FRONT WHEEL	L
223025	LEVER	F	230260	CARBURETOR	F
223026	CHOKE LEVER	F	230282	GASKET	B
223027	SPRING	F	230285	GASKET	B
223078	MUDGUARD STAY	J	230327	MAGNETO ASSEMBLY	E
223112	CHAIN TENSIONER LH	M	230328	BASE PLATE	E
223121	COUNTERSHAFT SPRING	C	230329	FLYWHEEL	E
223155	BEARING CUP TOP	J	230336	ELECTRONIC	E
223157	BEARING CUP BOTTOM	J	230401	INTAKE TUBE 23x27	F
223170	LIGHTING COIL	Ea	230403	EXHAUST PIPE	G
223421	CRANKSHAFT	B	230405	FRONT WHEEL	L
223423	GEAR WITH DRUMS	B	230406	REAR WHEEL	M
223429	CLUTCH HUB	B	230409	FRAME	H
223432	CLUTCH SHOE WITH	B	230410	BRAKE CABLE FRONT	K
223434	PIN	B	230411	BRAKE CABLE REAR	K
223435	DRIVING GEAR	B	230413	FUEL TANK	G
223440	CONTERING BUSH D9.8x16	A	230414	FUEL TANK COVER	G
223447	STARTER SHAFT	D	230417	FUEL VALVE	G
223448	SPACER	D	230418	SEAT	G
223456	MAINSHAFT	C	230419	SET OF DECALS	I
223458	COUNTERSHAFT	C	230421	SET OF DECALS	I
223461	2nd SPEED GEAR	C	230423	LEVER	I
228463	DRUM	C	230426	REAR FORK	H
223466	CYLINDER HEAD	A	230429	PROP STAND	H
223468	THRUST WASHER	B	230432	FOOTREST	H
223469	THRUST WASHER	C	230433	HANDLEBAR	K
223470	BEARING BUSH	B	230435	FRONT MUDGUARD	I
223471	ENGINE COVER LH	A	230436	MUDGUARD HOLDER	I
223473	SPRING	D	230438	REAR MUDGUARD	I
223562	CLUTCH SHOE	B	230439	ADJUSTING SCREW	L, M
223602	RUBBER COVER	D	230441	INNER TUBE	L, M
223603	INTAKE ELBOW	A	230442	TYRE 3 00-10 CROSS	L, M
223680	SHOCK ABSORBER	H	230445	RIGHT SHIELD	I
223747	PISTON	A	230446	LEFT SHIELD	I
223748	REED VALVE GASKET	A	230447	NUT	K
223796	CYLINDER GASKET	A	230449	CABLE FOR STOP SWITCH	K
224056	CLAMP	G	230459	RUBBER	G
227018	CLUTCH 1CPL	B	230489	SCHOCK ABSORBER	H
227019	CLUTCH 2CPL	B	230494	PLATE HOLDER	J
227149	EXHAUST FLANGE GASKET	G	230496	PLATE	I
227194	SPROCKET 1st GEAR	C	230497	PROTECTOR	K
227308	CLAMP	J	230503	SLIDING TUBE RH	J
227324	SEAL RING	F	230505	SLIDING TUBE LH	J
227326	BUSH	F	230507	FRONT WHEEL	L
227328	CHOKE LEVER	F	230508	BRAKE PLATE FRONT	L
227331	SET OF GASKETS	A	230509	REAR AXLE	L
227332	CRANKCASE	A	230511	DISTANCE BUSH	L

www.agmotor  
tel 051-584-188

# INDEX

Part. No	Description	Section
230513	REAR WHEEL	M
230514	BRAKE PLATE REAR	M
230515	REAR AXLE	M
230516	DISTANCE BUSH	M
230517	FRONT WHEEL	L
230518	REAR WHEEL	M
231015	RUBBER	A
240225	DISTANCE BUSH	M
260216	CATCH PIN	D
260217	SPRING	D

***www.agmoto.hr***  
***tel 051-584-123***